

Wall bracket for installing RRU, ARU readers and Wide Range 70° antennas (up to 23 kg total weight).



**> General specifications**

Order No.	52010261	
Type	MK-WM-100-100-Indoor	
Max. load-bearing capacity	[kg]	23
Adjustment range		
Elevation	[°]	± 15
Azimuth	[°]	± 90
Distance for mounting holes	[mm]	122
Weight	[kg]	0.5
Dimensions (L x W x H) (in basic position)	[mm]	approx. 152 x 100 x 82
Material		
Mounting profile	coated steel sheet	
Screws/hose clips	stainless steel	
Wall profile	aluminum	

**> Usable with the following**

RRU4 Reader Series	Order No.	Type
	52010093 + 5201096	RRU4-RS4-EG + RRU4-RS4-UG
	52010094 + 5201097	RRU4-ETG-E6 + RRU4-ETG-U6
	52010095 + 5201098	RRU4-ETL-E6 + RRU4-ETL-U6
	52010180 + 52010181	RRU4-ELC-E6 + RRU4-ELC-U6
ARU4 Reader Series	Order No.	Type
	52010099 + 52010102	ARU4-RS4-E6 + ARU4-RS4-U6
	52010100 + 52010103	ARU4-ETG-E6 + ARU4-ETG-U6
	52010101 + 52010104	ARU4-ETL-E6 + ARU4-ETL-U6
	52010225 + 52010226	ARU4-ETL-E6 + ARU4-ETL-U6
	52010270 + 52010271	ARU-ELC-E6 + ARU-ELC-U6
WIRA 70 Antenna Series	Order No.	Type
	52010078 + 52010079	WIRA-70-circular-ETSI + WIRA-70-circular-FCC
	52010193 + 52010194	WIRA-70-KRAI-ETSI + WIRA-70-KRAI-FCC

**> Remarks**

**Scope of delivery**

- Wall profile
- Mounting profile
- Mounting hinge
- Mounting material

➤ **Selecting the installation location**



Before drilling the holes, make sure there are no electrical cables in the wall.

**Risk of fatal injury due to electric shock!**

Make sure that the wall / the mast have adequate load-bearing capacity. Use suitable fastenings (not included).  
If necessary, enforce the wall at your chosen installation location, or use a different mast.

➤ **Dimensions [mm]**

Wall Installation

